



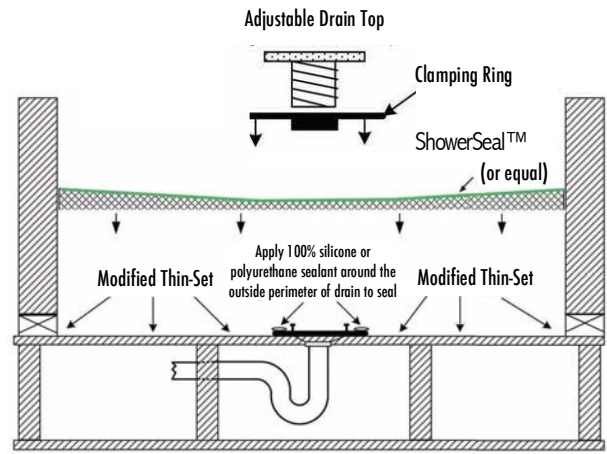

# ShowerSlope™ Installation Instructions

Do not use "premixed" thin-set. Premixed thin-set does not cure well in an enclosed shower area.

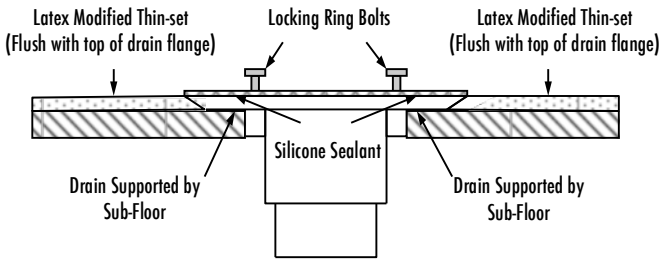


(FIGURE - 1)

Clean and remove any debris from sub-floor in the area that the ShowerSlope™ is to be installed.

- 1.) Apply latex modified thin-set mortar to the substrate using 3/4" V or U-Notched Trowel (See FIGURE - 1).
- 2.) Apply a bead of 100% silicone or polyurethane sealant ShowerSeal™ (or equal) around outside perimeter area of tile drain (See FIGURE - 2)
- 3.) Lower ShowerSlope™ into place. Ensure that the ShowerSlope™ is evenly embedded in the mortar (i.e. – "walking-around" on the installed ShowerSlope™). (See FIGURE - 3)
- 4.) Install clamping ring using bolt provided with the drain. (See FIGURE - 4)
- 5.) The weep holes are now obsolete. Screw in barrel drain then fill clamp area with thin-set. (See FIGURE - 5)

Apply 100% silicone or polyurethane sealant around the outside perimeter of drain to seal.

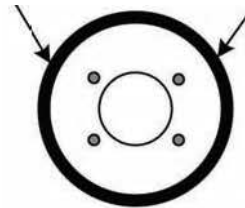


(FIGURE - 2)




(FIGURE - 3)

Lower ShowerSlope™ into place. The drain's "collar bolts" will protrude through center hole in the ShowerSlope™.

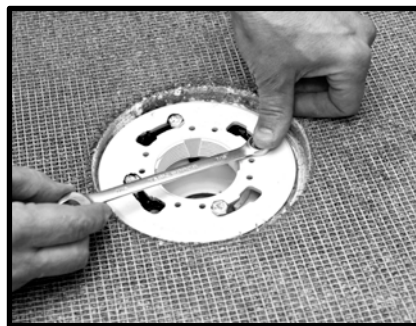


(FIGURE - 4)

Clamp the ShowerSlope™ to the drain using the drain's clamping ring.

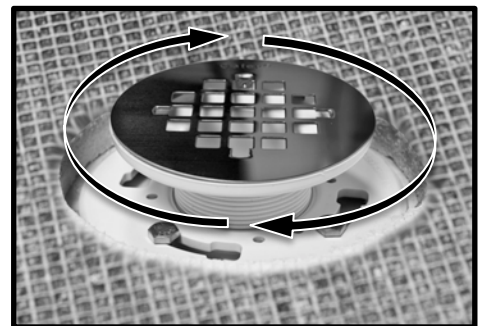

(FIGURE - 5)

Fill the shower drain's clamp area with thin-set. The weep holes are obsolete with the ShowerSlope™ drain connection.

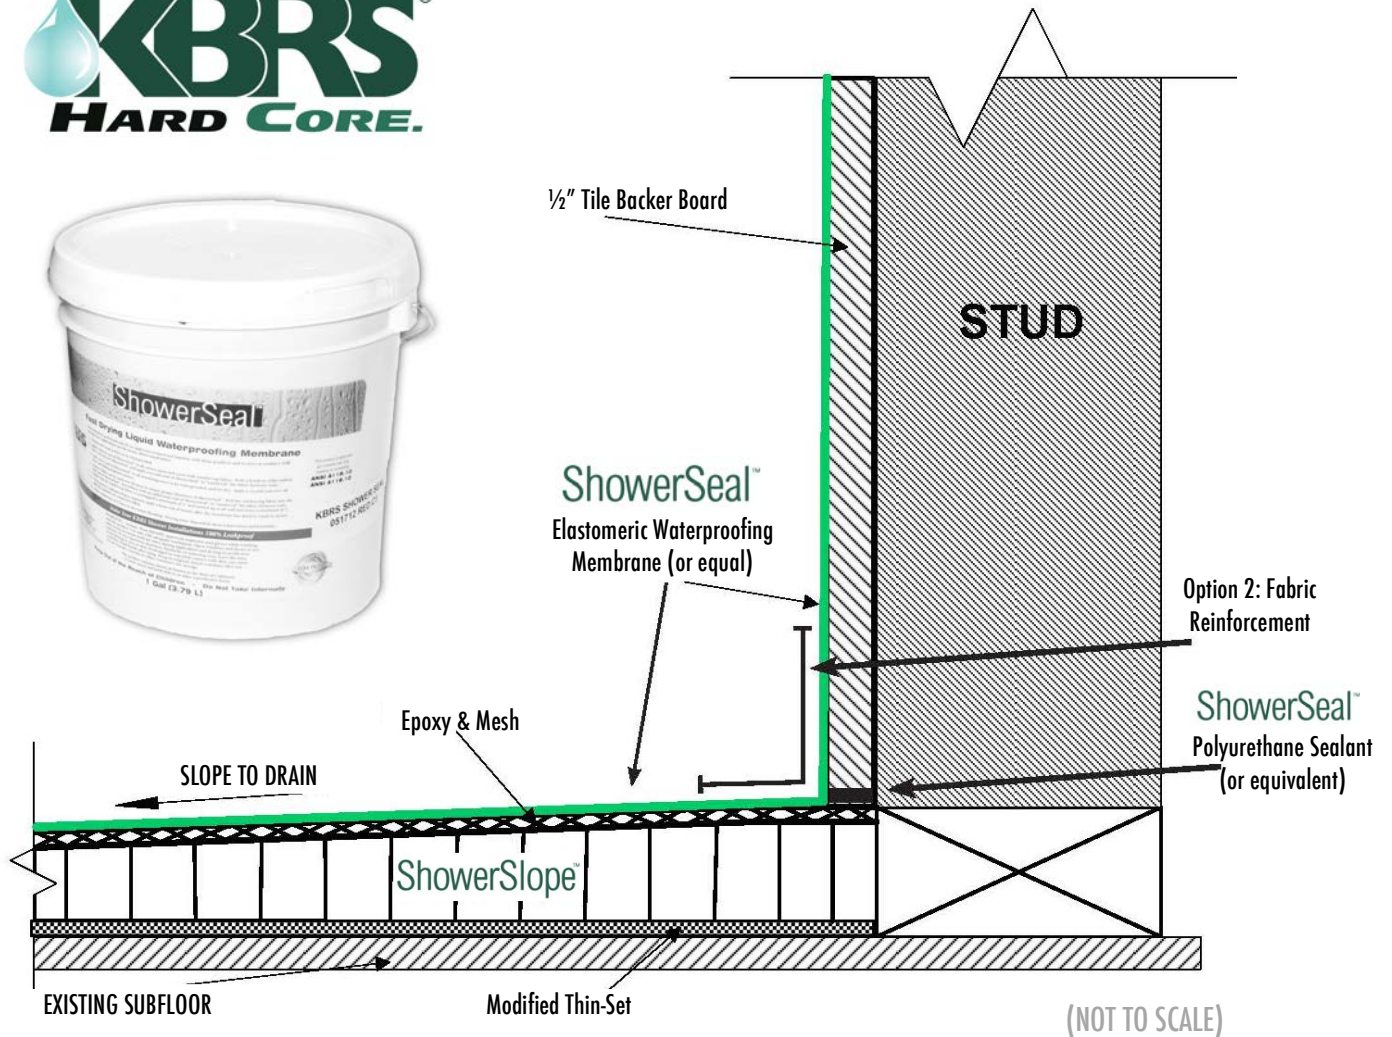

Once the ShowerSlope™ and Tileable™ wall backer board have been properly installed, apply a coat of ShowerSeal™ (or equal) to the entire top surface of the ShowerSlope™. Use an approved fabric on all joints and seams to ensure a secure perimeter. Apply an additional coat of ShowerSeal™ (or equal) to the seams where the backer board meets the ShowerSlope™ (Note: Extend each coat a minimum of 6" horizontally, and 6" vertically from the seam). ShowerSeal™ (or equivalent) can take anywhere from 20-45 minutes per coat to dry.

To install a KBRs Hard Curb, use a 3/4" notched trowel and the same modified thin-set as used in the ShowerSlope™ installation. Use same polyurethane sealant on joint/seam between ShowerSlope™ and HardCurb™. Apply ShowerSeal™ (or equal) and approved fabric to secure seam.

\* For a fully warranted waterproof shower install: paint entire backer board with ShowerSeal™ (or equal) according to manufacture's installation instructions. \*